



First Aid/Storage Box

<u>Kit Contents</u>	<u>Tools Required</u>
<ul style="list-style-type: none">• First Aid/Storage Box• Mounting Bracket• Mounting Screws (qty. 2)	<ul style="list-style-type: none">• 3/8" Socket and Wrench

Please read instructions thoroughly before completing installation. If you have questions or concerns, please do not hesitate to contact me.

Installation

The First Aid/Storage Box mounts under the driver or passenger seat. The car is equipped for the box and the holes for mounting the unit are pre-drilled. Before beginning, you will want to move the seat to its highest point and as far back as you can. It is difficult to locate the holes for the screws so you may want to use a small mirror to help locate the holes under the seat. Figure 1 shows the location of the holes. The bracket has provisions for 3 screws, but I have found that the 2 screws are all that are required for the box. The third screw was almost impossible to install with the seat in the car.


Figure 1.

Front of Seat




Once you have located the two holes, you can mount the bracket. Familiarize yourself with the mounting bracket. In Figure 2, each mounting point corresponds to the mounting point on the bottom of the seat listed in Figure 1.

Figure 2.

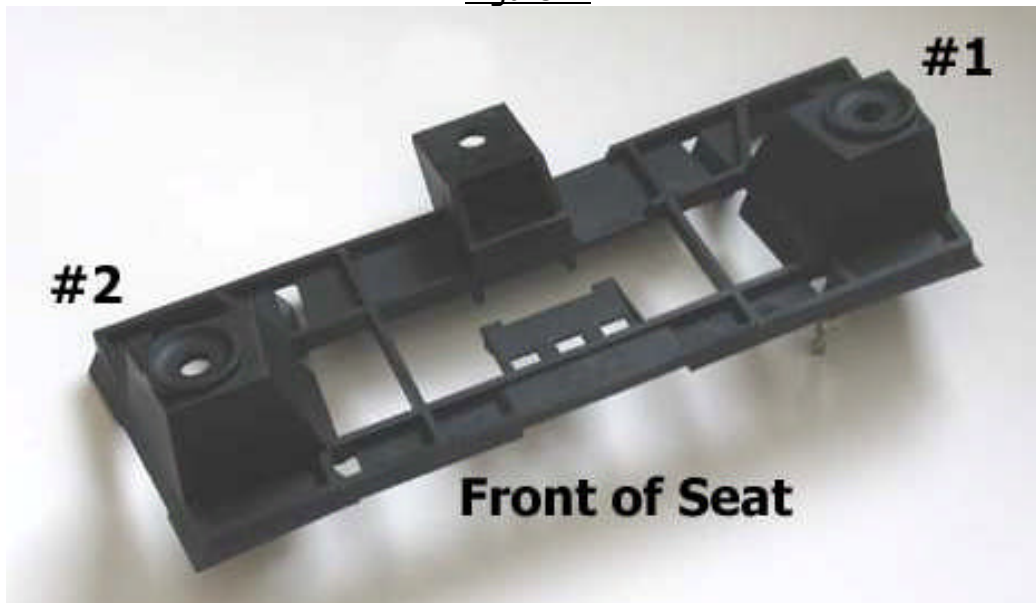

To mount the bracket, use the screws provided. You will need to use a 3/8" socket wrench.
Figure 3.

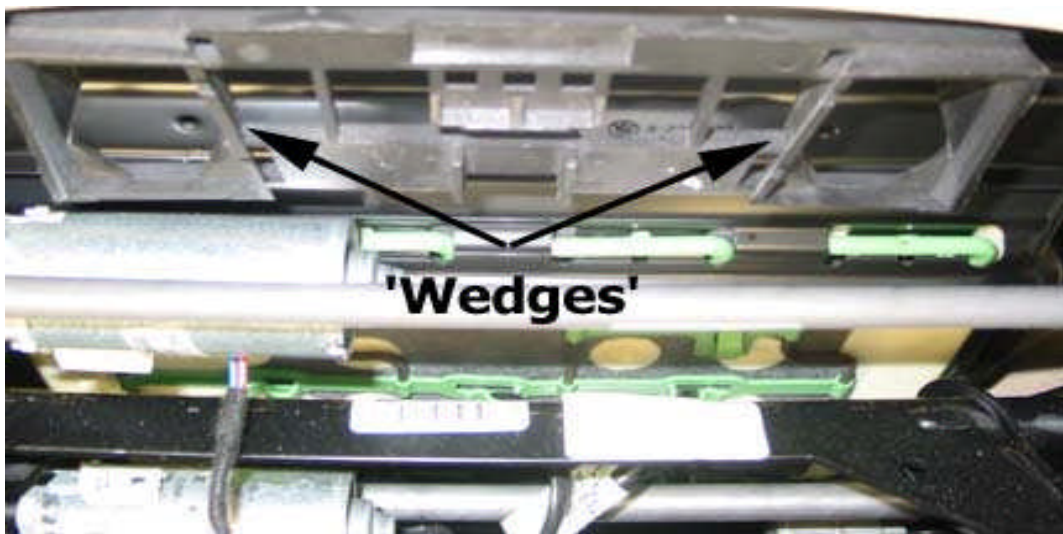

With the Mounting Bracket secured, you slide the Box onto the bracket. The bottom of the bracket has 2 'wedges' that mate with female counterparts on the top of the box. In Figure 3, the wedges have been indicated. Once the box is secured to the bracket, you are finished.